
Remote Socket Set User manual

A. Function

- 1. LED on the transmitter (remote control) indicates that a signal is being transmitted.
- 2. Indicator light on the receiver (socket) indicates that the socket is working.
- 3. Both transmitter (remote control) and receiver (socket) have 4 channels and 4 codes.
- 4. The code of the transmitter (remote control) and receiver (socket) can be adjusted.

B. The Product:

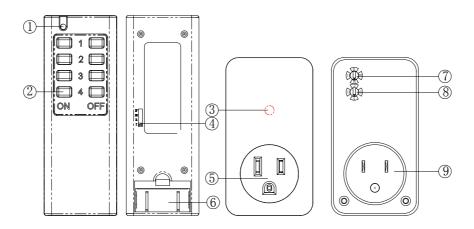


No.	Description	No.	Description	No.	Description
1	LED light	4	Code adjustment switch	7	Code adjustment dial
2	ON/OFF Channels	5	LED light	8	Channel adjustment dial
3	LED light	6	Battery cover	9	Plug

C. Code and Channel Adjustment


1. Code adjustment:

Adjust the code of the transmitter and receiver so that they each use the same code (There are 4 corresponding codes). Please refer to the images below:

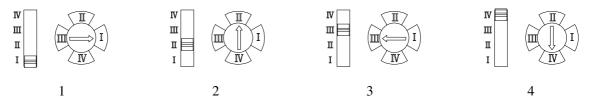

2. Channel adjustment:

Adjust the channel of receiver to the corresponding channel of the transmitter, please see the following images: there are 4 corresponding channels

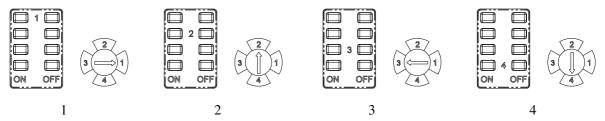

PS: Please change the code if you encounter interference with another socket.

D. Operation:

- 1. Adjust the code of both transmitter and receiver so that they are using the same code.
- 2. Adjust the channel of the receiver to the corresponding channel of the transmitter.
- 3. Plug your electrical appliance into a receiver socket. Then plug the receiver into the AC socket.
- 4. Press the corresponding channel on the remote control. Press the "ON" button and the socket will turn on and the LED will illuminate. Press the "OFF" button and the socket will switch off and the LED light will go off.

E. Specifications:

1. Transmitter battery: 12V/23A

2. Transmitter radio frequency: 433.92MHz3. Receiver voltage: 120V / 60Hz / IP20/15A

4. Receiver maximum wattage: 1800W

5. Transmittion range: Typically 30m (clear line of sight)

WEEE Directive & Product Disposal



At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal





Γhis symbol on the battery indicates that the battery is to be collected separately. This battery is designed for separate collection at an appropriate collection point.

F.Caution

This device complies with Part 15 of the FCC. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - —Consult the dealer or an experienced radio/TV technician for help.